



Surface Mount Medicine Cabinets

Our Medicine Cabinet mounting system is easy to use, convenient, and very strong.

1. Determine the desired location of the Medicine Cabinet box (before lights or crown molding are installed) and mark the wall, with a pencil, at top center of the Cabinet box. See Figure 1.

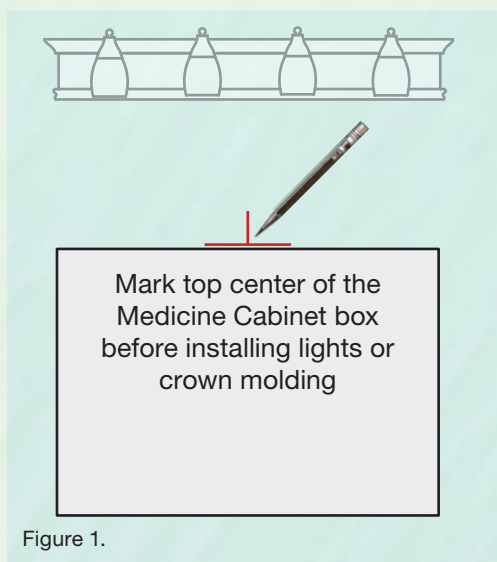


Figure 1.

2. Measure down 3½" and make a level horizontal line. The top edge of the Wall Mounting Bar will be at this line. See Figure 2.


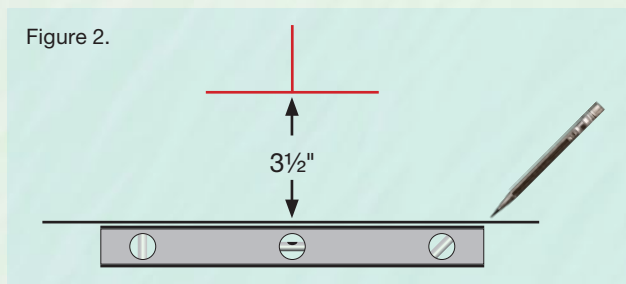


Figure 2.

3. Locate wall studs. Use two to four large (min 3") screws to secure Wall Mounting Bar to the wall. Pre-drill screw holes in the bar slightly larger than the screws being used. Run screws through bar, sheetrock and well into studs. If you are not familiar with types of screws, load, or how to do this for your specific application; ask at a home center. Do not bend the Wall Mounting Bar even if wall is curved.

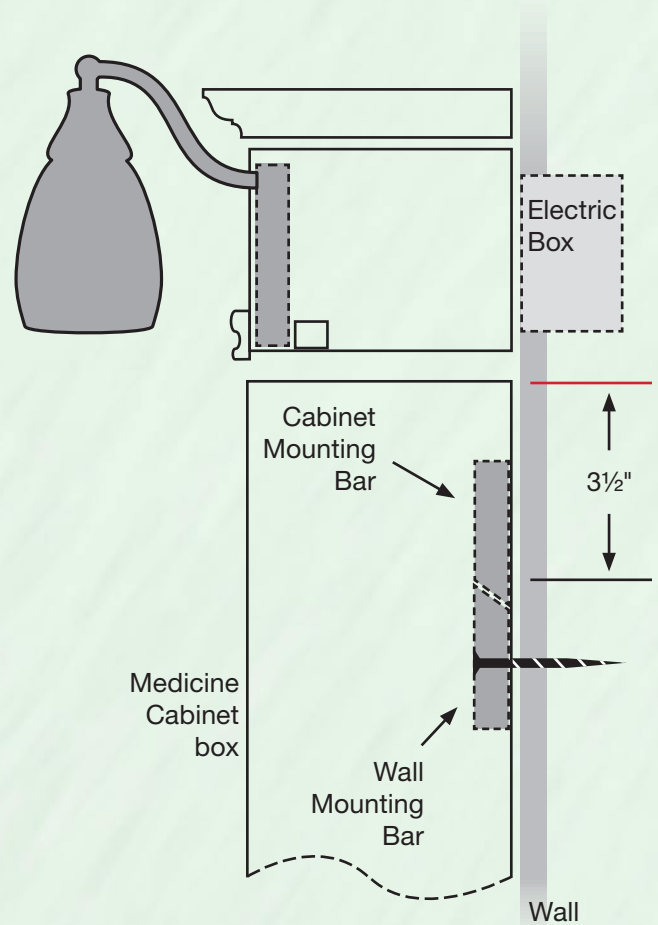



4. Place Medicine Cabinet against the wall and slide down until the Medicine Cabinet Mounting Bar mates with the Wall Mounting Bar.

Electrical

You are either installing your Medicine Cabinet with Lights or without. If without, simply secure the Crown Molding to the top of the cabinet.

If your Medicine Cabinet has lights, have your electrician mount an electrical junction box as shown in figure 3.

Attach the light housing to the Medicine Cabinet top securely with screws. Slide the lighting fixture into the housing as shown in figure 4. Adjust blocks to insure housing is snug.

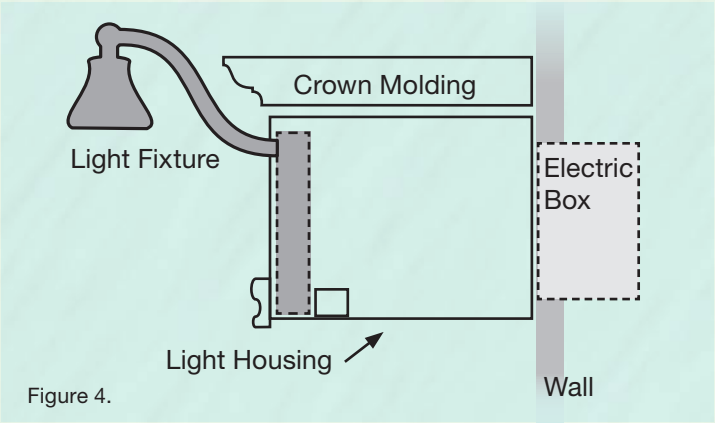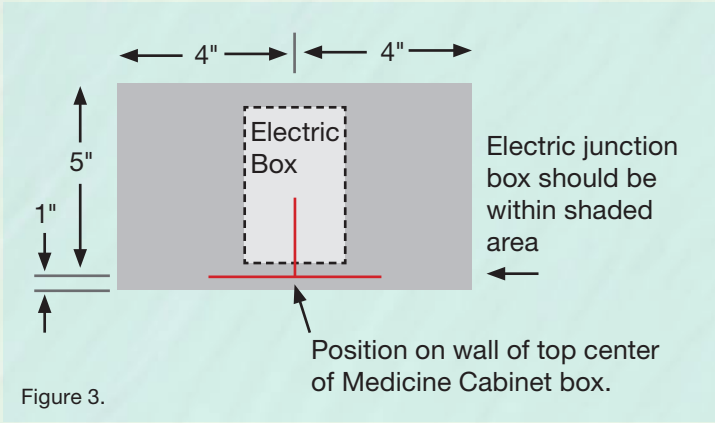


Your electrician can now connect the light fixture wiring at the Electric Junction Box according to code.

Place the Crown Molding onto the light housing and secure.

Light fixtures use candelabra base bulbs available in a variety of wattages. We recommend 40 watt bulbs for most applications but your personal taste will dictate the wattage you choose. **Be sure to use bulbs rated for "Base Up" or "Ceiling Fan" applications.**







Light globes fit over the porcelain sockets and are held in place with supplied metal nuts.

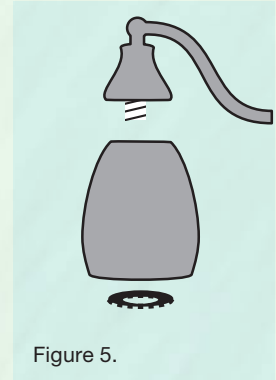


6-Way Adjustable Hinges


Installing, removing, and adjusting your Cabinet doors is easy with our 6-way adjustable hinges.

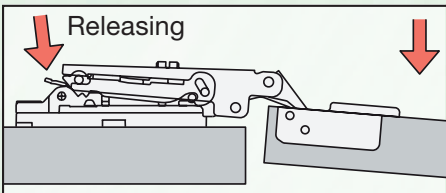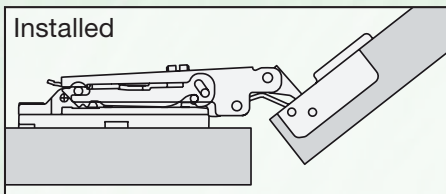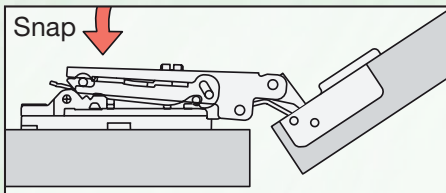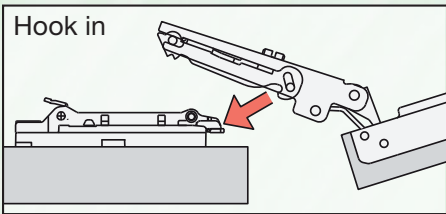


Loosen indicated screws on both hinges to adjust door up/down. **Never** adjust one hinge without also adjusting the other hinge.

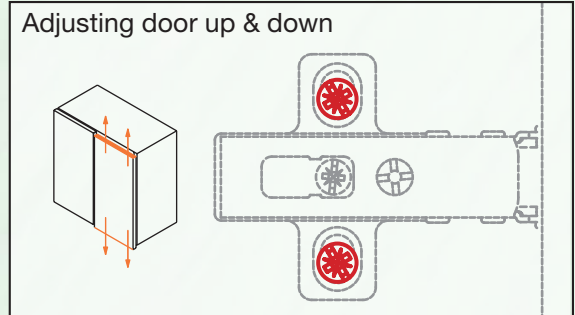

Simply turn indicated screw to adjust door in/out.

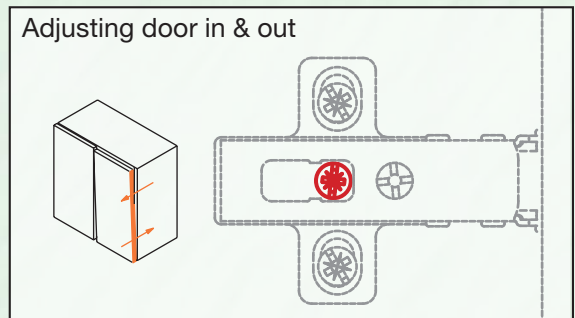

Simply turn indicated screw to adjust door left/right.

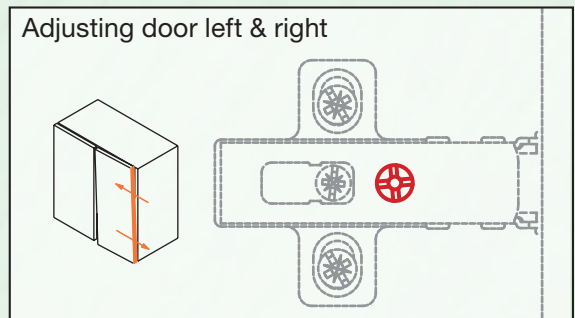


Recessed Medicine Cabinets




1. Remove the door for ease of handling and safety.
2. The rough opening for the 20" Wide recessed Medicine Cabinet is 19 $\frac{1}{4}$ " Wide by 30 $\frac{1}{8}$ " High; for the 15 $\frac{1}{4}$ " Wide model the rough opening is 14 $\frac{1}{2}$ " Wide by 30 $\frac{1}{8}$ " High. The rough opening must be at least 4" deep. The opening should be framed in for strength and to provide for cabinet attachment.
3. The cabinet box must be level for proper door operation.

Changing Door Swing

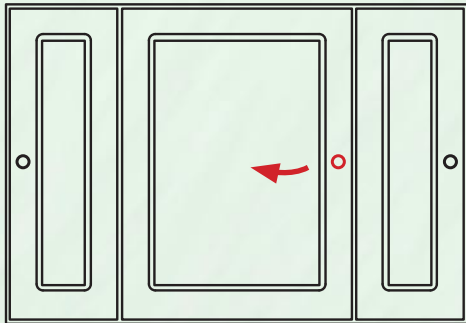

For Tri-View
& Single-Door (surface
or recessed)
Medicine Cabinets:
To change the door swing
from *right-to-left* to *left-to-right*
or vice versa, simply
rotate the cabinet body
180 degrees and hang
on your wall.

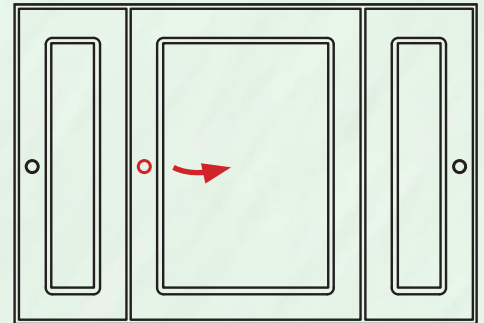

Cleaning

Use only a damp cloth to clean the Medicine Cabinet interior. Moisten the cloth instead of spraying into the interior. Clean mirrors with a glass cleaner that does not contain ammonia or vinegar. Never use abrasive cleansers on any part of your Medicine Cabinet and use only a soft cloth, never a scouring sponge. Never use bleach, solvents (like nail polish remover), or harsh cleaners on your Medicine Cabinet.

If you have questions, don't hesitate to call our Customer Service
Toll Free 1-800-445-0494, 7AM-4PM Pacific Coast Time.

Thank you for purchasing Strasser Woodenworks Products for your bath.

Crafted in USA. Lasting a Lifetime.

