


Internal Divider .....

Basin placement range varies with brand and model. Shown is for Kohler 2210.

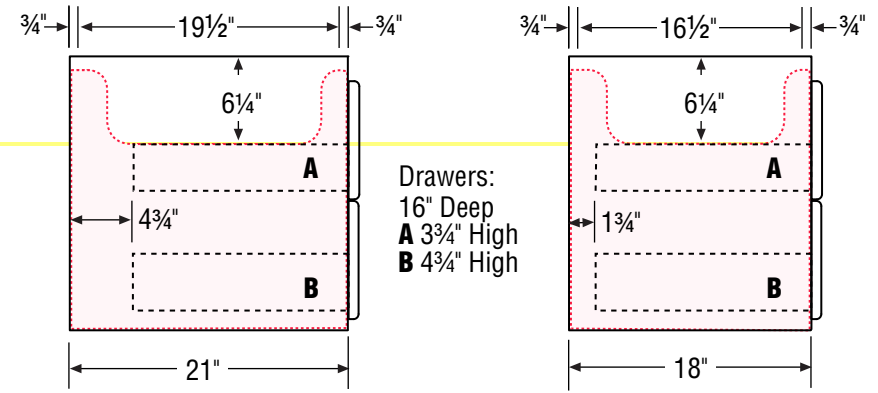

Drawers:  
16" Deep  
A 3 3/4" High  
B 4 3/4" High



21" Deep or 18" Deep option.

The nature of wall mount vanities requires special installation procedures. It is imperative that proper mounting procedures be followed. See instructions before installing.


### 36" Vanity

Right Hand or Left Hand Drawers

36" Wide  
19 3/4" High  
21" or 18" Deep

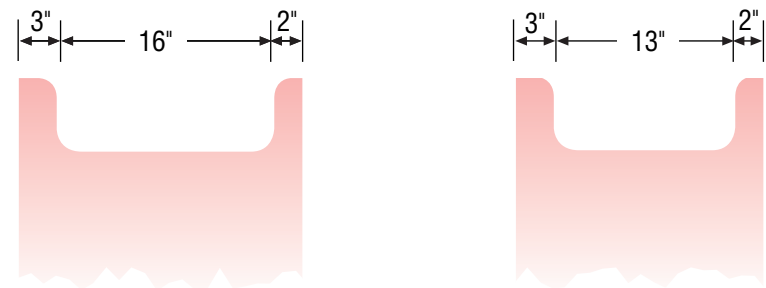


Internal Dividers

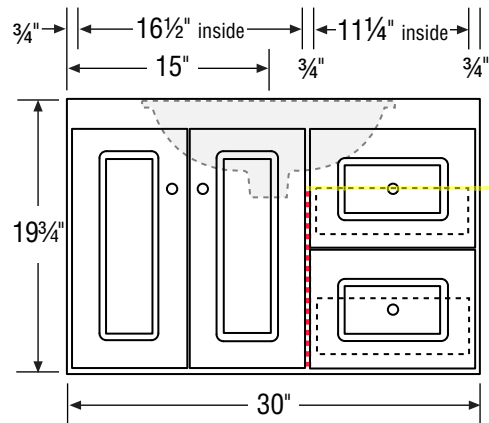

Internal Divider .....

Basin placement range varies with brand and model. Shown is for Kohler 2210.  
Offset basin placement not recommended for 30" wide vanities.

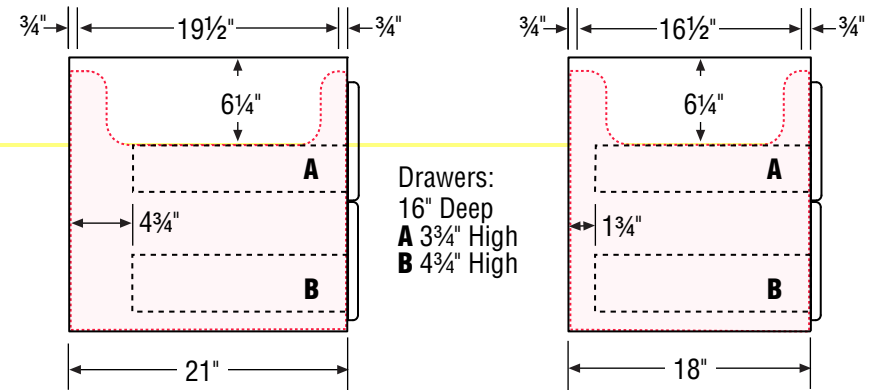

Drawers:  
16" Deep  
A 3 3/4" High  
B 4 3/4" High



21" Deep or 18" Deep option.

The nature of wall mount vanities requires special installation procedures. It is imperative that proper mounting procedures be followed. See instructions before installing.


### 30" Vanity

Right Hand or Left Hand Drawers



30" Wide  
19 3/4" High  
21" or 18" Deep

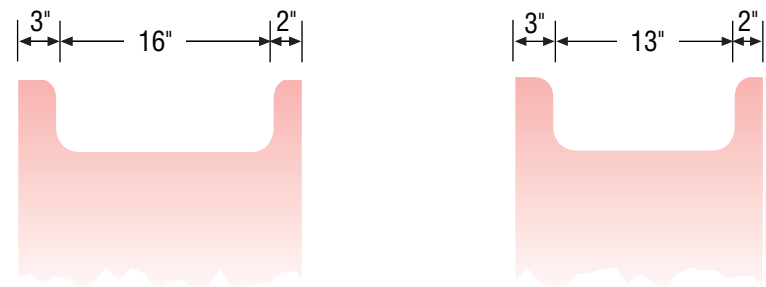

Internal Dividers

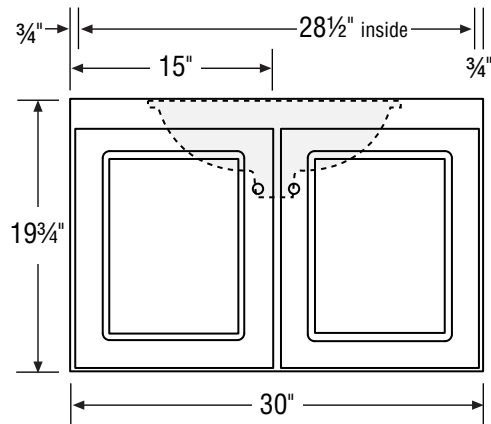

Basin placement range varies with brand and model. Shown is for Kohler 2210.  
*Offset basin placement not recommended for 30" wide vanities.*

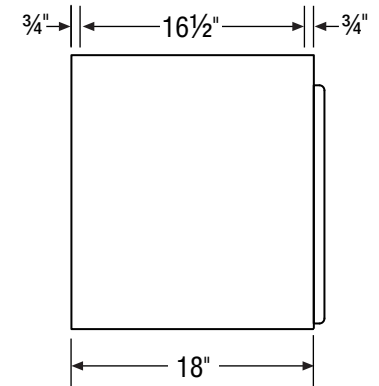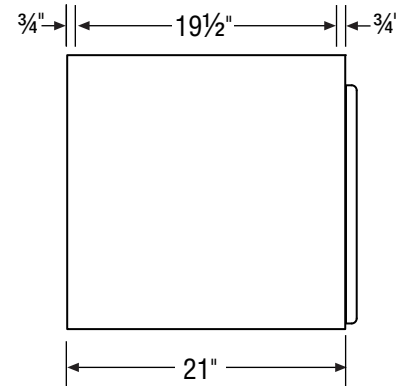



21" Deep or 18" Deep option.

The nature of wall mount vanities requires special installation procedures. It is imperative that proper mounting procedures be followed. See instructions before installing.



### 30" Standard Base Vanity

30" Wide  
 19 3/4" High  
 21" or 18" Deep

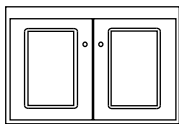

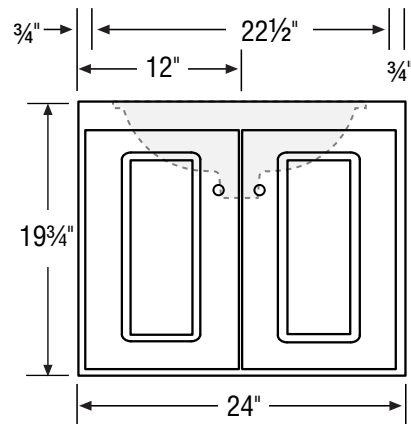

Basin placement range varies with brand and model. Shown is for Kohler 2210.

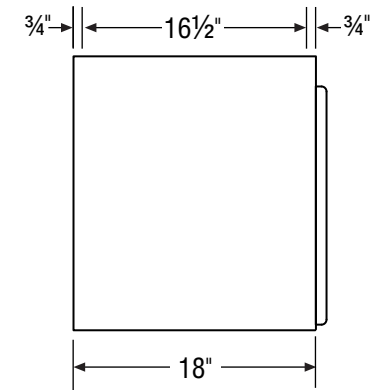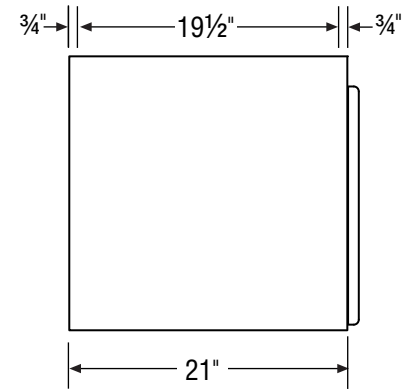




21" Deep or 18" Deep option.

The nature of wall mount vanities requires special installation procedures. It is imperative that proper mounting procedures be followed. See instructions before installing.

## 24" Vanity

24" Wide  
 19 3/4" High  
 21" or 18" Deep

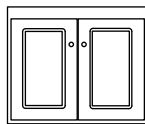

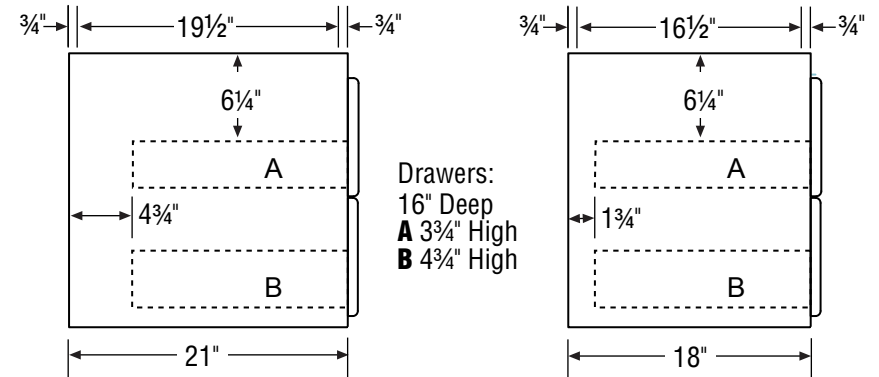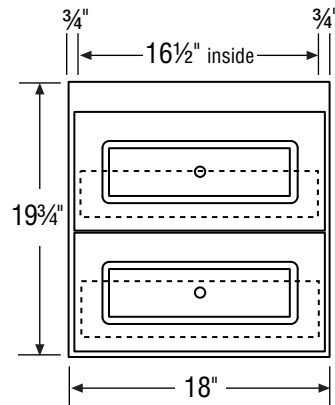




21" Deep or 18" Deep option.

The nature of wall mount vanities requires special installation procedures. It is imperative that proper mounting procedures be followed. See instructions before installing.

## 18" Drawer Bank

18" Wide  
 19 3/4" High  
 21" or 18" Deep



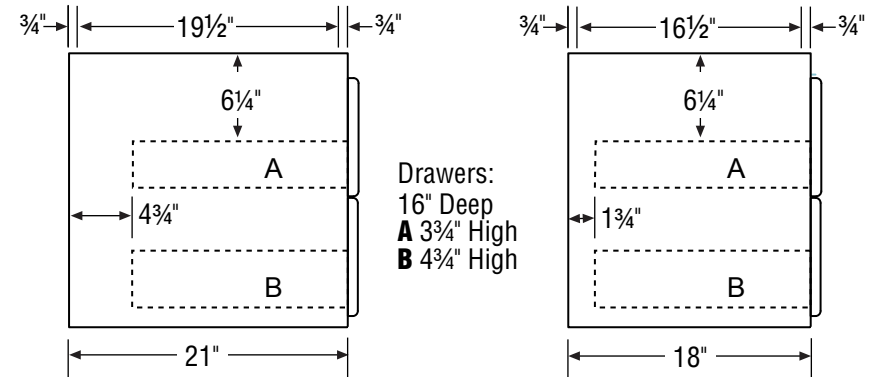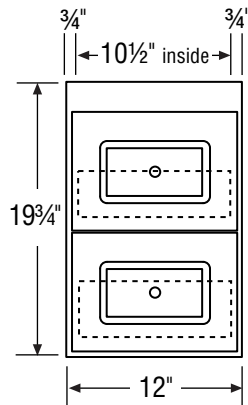

21" Deep or 18" Deep option.

The nature of wall mount vanities requires special installation procedures. It is imperative that proper mounting procedures be followed. See instructions before installing.

## 12" Drawer Bank

12" Wide  
 19<sup>3</sup>/<sub>4</sub>" High  
 21" or 18" Deep

